






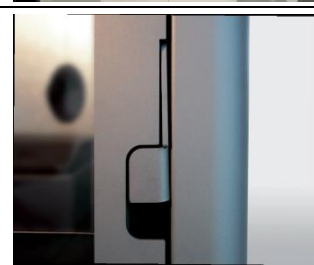


## Routine maintenance of Kalor wood pellet stoves - performed by owner/user

By way of example only, we list the typical procedure below, of the maintenance operations carried out on a day-to-day basis:

**Important: All maintenance should be carried out when the stove is cold**

<p>1. Open front door to gain access to combustion chamber</p>		<p>2. Remove ash pan and empty. Ashes can be spread on your lawn and is an excellent fertilizer</p>	
<p>3. Remove burnpot, clean and ensure that all holes/slots are clear</p>		<p>4. Remove top baffle from "roof" of combustion chamber</p>	
<p>5. Vacuum thoroughly the combustion chamber and area above the baffle</p>		<p>6. Clean the heat exchanger tubes using hand or the tool provided. This is often hidden behind grill near top of stove.</p>	
<p>7. Check air intake pipe and vents in room and ensure that they are clear</p>		<p>8. Replace all parts and close door tightly</p>	

It is recommended that the above procedure is carried out on a daily base throughout the heating season. The more often you clean your stove, the more efficiently it will run and the safer and more reliable it will be.

### NOTES:

- The images above are indicative only and may not exactly represent your stove model
- The above is indicative only and you should read your stove manual and consult your supplier and/or installer for full list of operations
- Full servicing should be carried out by a trained & authorised Kalor technician at least once per year at the beginning of the heating season, or more often for heavy usage. Consult your installer for further information.

**Your trusted local dealer:**